

ZODIAC XL FIREWALL FORWARD Rotax 912S



CONTENTS

- Section 1: Engine Mount**
- Section 2: Bolt Engine**
- Section 3: Throttle and Choke**
- Section 4: Radiator**
- Section 5: Oil Cooler**
- Section 6: Propeller Extension**
- Section 7: Cowl**
- Section 8: Muffler**
- Section 9: Air Filter**
- Section 10: Electric**

NOTICE: This photo manual has been written and published strictly for informational purposes to aid in the construction of the ZODIAC kit aircraft. It has been prepared as a guide to facilitate the assembly of ZODIAC kit aircraft. It is published and is to be used with the ZODIAC CH 601 Drawings & Manuals. The photos are used for general identification only, and are not to be taken to represent technical drawings. You should not consider the educational material in the manual to be the practice of general aviation nor is it intended for this manual to be a complete account of sheet metal aircraft technology: it is limited to the scope of the assembly of ZODIAC kit aircraft.

This manual is not intended to replace, substitute or supersede any technical information contained in the ZODIAC Drawings and Manuals, Newsletter Updates, or any Federal Aviation Administration regulations. Information contained in this photo manual has been obtained by Zenith Aircraft Company from sources believed to be reliable, however, we cannot guarantee the accuracy or completeness of any information published herein and we shall not be responsible for any errors, omissions, or potential damages arising out of use of this information.